



Cartable Solutions Industries, LLC

Cartable Solutions Industries, LLC

OPERATING INSTRUCTIONS

WARNING !

**DO NOT TURN ON HEATER
UNTIL PUMP HAS
FILLED TANK!**

**WHEN TURNING ON PUMP, OPEN
FAUCETS TO RELEASE AIR FROM
SYSTEM.**

Portable Self-Contained Sinks

NOTICE

PLEASE FOLLOWING INSTRUCTIONS CAREFULLY IN ORDER TO AVOID
DAMAGE TO COMPONENTS OF YOUR NEW PORTABLE SINK

1. Be sure main switch box is in the "OFF" position. Feed master cord through side hole and plug into 110V outlet.
2. Insert fitting or tubing into waste water tank
3. Fill fresh water tank and insert rubber stopper with tubing into tank, being sure that tubing reaches bottom of tank. IMPORTANT: Be sure not to block vent holes in fresh and waste water tanks!
4. Plug in pump and hot water heater into main switchbox, leaving switch on hot water heater in the "off" position. Turn switch on main box into "ON" position.
5. Open cold water faucet, letting pump run, until water comes out of spigot. Close cold water faucet.
6. Open hot water faucet, letting pump run, until water comes out of spigot. Close hot water faucet. Air has now been removed from system.
7. Let pump cycle for approximately 2-3 minutes until the pump shuts off. Once the pump shuts off, open both faucets to remove any remaining air and close faucets immediately when water flows.
8. Turn switch on hot water heater to "ON" position and heat water to desired temperature.
9. TO DRAIN HOT WATER HEATER: Remove overflow pipe at hose fitting. Remove two wing nuts and hold down bar. Slide hot water heater to front of cabinet and unscrew drain plug to empty water into receptacle placed under the unit. Tip forward to ensure all water is drained.

TROUBLE-SHOOTING

NO POWER:

- Be sure you are plugged into a live 110v outlet
- Press "reset" button on main GFCI switchbox
- Be sure to plug in pump and hot water heater in main switchbox

PUMP NOT TURNING ON:

- Check power connections (see #1)

PUMP NOT TURNING OFF

- Air in system will prevent pump from automatically turning off
- Check fresh water hose to be sure it is reaching the bottom of the tank
- Check fresh water level. Is it empty?
- Check quick-connect fitting to be sure they are tightened.
- Open faucets to remove air in lines after fixing problem

WATER LEAKS

- Push quick-connect fittings until tubing seats
- Tighten clamps on all drain fitting until snug

HOT WATER NOT ON

- See #1 for power problems
- Switch on hot water heater is off
- Reset button on hot water heater under face plate (see hot water heater manual)
- Heater element is burned out

HOT WATER TEMPERATURE TOO LOW

- Remove hot water heater face plate to adjust temperature (see hot water heater manual)

WARRANTY

CSI sink products are warranted to be free of defects in material and workmanship for one year from date of purchase.

Cartable Solutions Industries, LLC will, at its election, repair, replace or make appropriate adjustment where CSI inspection discloses any such defects occurring in normal usage within one (1) year after purchase. CSI is not responsible for shipping costs. If it is determined that the hot water heater was run dry, the defect was caused by owner neglect or abuse, or there were modifications of any kind made to the unit, the warranty will be considered void.

To obtain warranty service contact Cartable Solutions Industries by writing CSI, PO BOX 25058, Farmington, NY 14425, or by calling 1-877-337-7496 from within the USA, 1-585-742-3825 from within Canada and Mexico.

IMPLIED WARRANTIES INCLUDING THAT OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE EXPRESSLY LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY. CARTABLE SOLUTIONS INDUSTRIES AND/OR SELLER DISCLAIMS ANY LIABILITY FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Some states/provinces do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of special, incidental or consequential damages, so these limitations and exclusions may not apply to you. This warranty gives you specific legal rights. You may also have other rights which vary from state/province to state/province.